

Using the Eastron 1P Energy Meter with the Sunsynk Inverter

1. Wire the live into port 4.
2. Wire the neutral into port 3.




3. Connect the CT coil, black into Port 2 and connect the white into port 1.




4. Using CAT-5 use the brown and brown/white and move the others out the way or cut back.
5. Connect the brown to port 10.
6. Connect the brown / white to port 9.



7. On the other end of the CAT-5 cable use a RJ45 connector and slot the brown/white cable into pin 4 and the brown cable into pin 5.

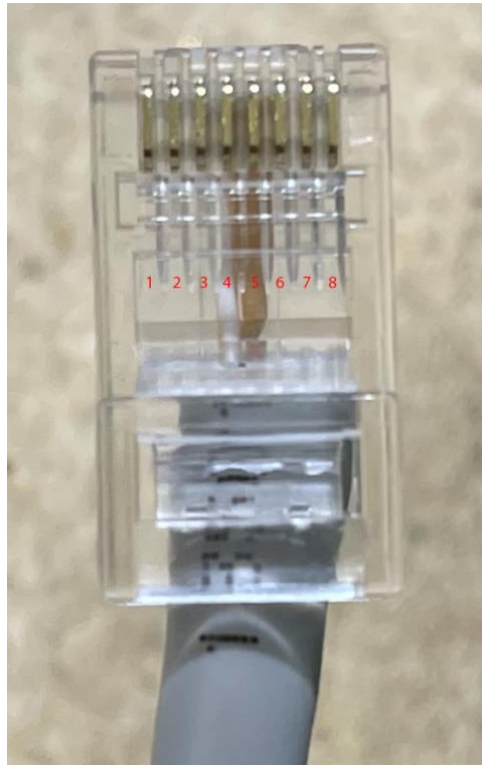

8. You now need to enable the meter via the settings on the Inverter, select the settings cog on the inverter display (Top right).
9. Select Advance
10. Select Multi-inverter
11. Select EX_Meter for CT
12. Then select the Meter model.

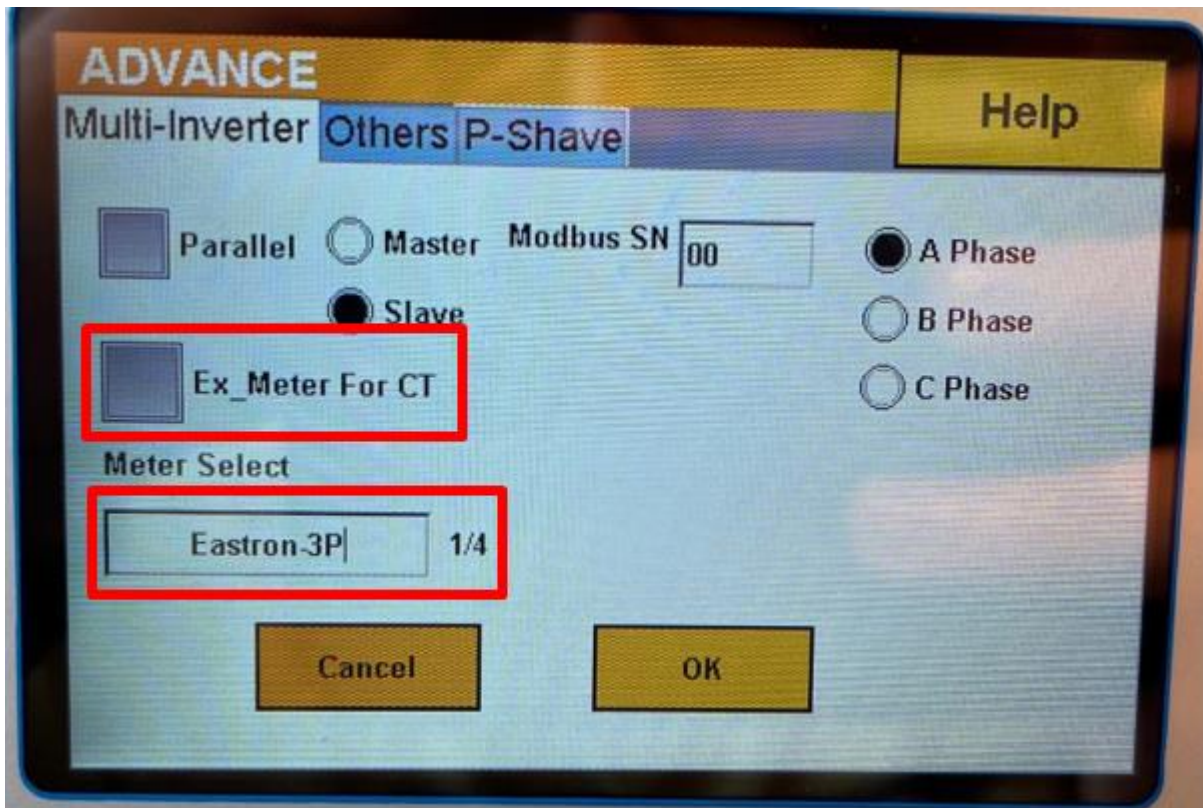

Note, for the single phase Eastron meter, you will need to select "Eastron-1P".